



SPOT MONITOR / CVBS OUTPUT SETUP

MAIN CVBS SETUP MODE


1. Right click > **MENU** > Click **PASSWORD**
2. Click on **CONFIGURATION** > Click **LIVE VIEW**
3. Click **VGA/HDMI** > Click **MAIN CVBS**
4. In **LIVE VIEW MODE** row > select view for your **SPOT MONITOR / CVBS OUTPUT** (1x1, 2x2, etc...)
 - To Rotate SPOT MONITOR view > Click NO SWITCH > select the amount of time between cameras switching
5. Click **APPLY**
6. Across the top of the screen Click **VIEW**
7. Click **VGA/HDMI** > Select **MAIN CVBS**
8. Make sure your **SPOT MONITOR VIEW** is the same as in **Step #4**
 - See Image Below - (1x1, 2x2, 1+5, etc...)

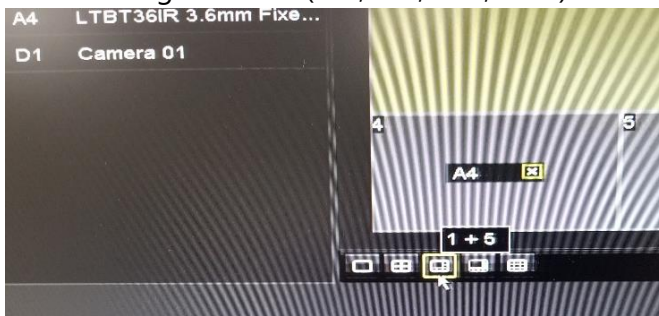

9. To change camera location, Click on the **"X"**

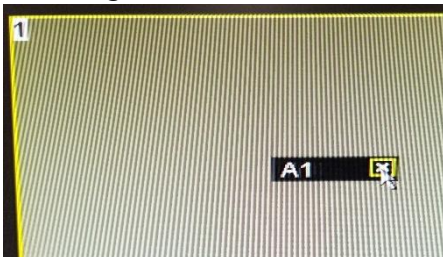

10. Double Left Click the camera you want in that location

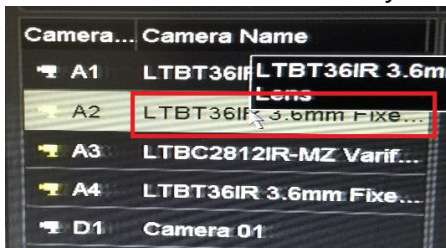

11. Click **APPLY**