

HOW TO SETUP ANALOG AND HD ANALOG CAMERAS

1. Run RG59 18/2 or Category 5/6 cable from cameras to recorder
 - a. CAT5/6 cable needs a balun to run camera on this type of cable
2. Power and connect BNC cables to camera. Run cable to the back to the recorder and connect BNCs to BNC ports on the back of the recorder
3. The DVR will automatically detect standard analog and HD analog cameras
 - a. If cameras do not automatically detect. *Right* click> Enter MENU > SHUTDOWN > REBOOT
 - b. If certain cameras still do not appear. Use a test monitor at the DVR to see if you are getting a picture.
 - c. If your test monitor is not getting a picture, go to the camera with the test monitor and see if you are getting an image.
 - d. If you still are not getting an image cover the camera, to trick it into night mode and check to see if the RED IR LEDs are coming on
 - e. If the IR LEDs are not coming on then test your power and make sure you are getting the proper voltage and amperage to power the camera