## **EXPORTING VIDEO**



- 1. Click **CONFIGURATION** > Click **LOCAL** at the top left side menu
- 2. In the middle of the screen find RECORD FILE SETTINGS & PICTURE AND CLIP SETTINGS
- 3. Select BROWSE at each five locations and create a file path of where you want the video saved
- 4. Click SAVE > Click PLAYBACK > Find the video you want to EXPORT
- 5. When the video gets to the part you want to EXPORT
- 6. Click the **SCISSORS** (circled below)

	Live View	Playback	Configuration					👤 admin 🛛 🕞 Lo
Embedded Net DVR	Channel No.: 1						Status: 1Speed	
Camera 01								📢 🖣 Jul 2017
Camera 02								Sun Mon Tue Wed Thu
Camera 03								25 26 27 28 29
Camera 04								2 3 4 5 6
Camera 05								9 10 11 12 13
Camera 06								16 17 18 19 20
Camera 07								23 24 25 26 27
Camera 08								<b>30 31</b> 1 2 3
Camera 09								Stream Type
Camera 10								Main Stream
Camera 11								O Same
Camera 12								Q Search
Camera 13								
Camera 14								
Camera 15								
Camera 16								
								Set playback time
								Set playback time
	-		∢ ∎ ↔	▶  ▶		R 🛛 🔸	)@ •• • ± छ	00 : 00 : 00 4
00 19:00	20,00	21;00	22:00	2017-0 23;00	7-28 00:00:03 0000 01:00	02;00	00;00 00;00	05:00
							Command	Continuous 📕 Alarm 📒 I

- 7.
- 8. This starts the EXPORT > when the clip is over click the SCISSORS to stop EXPORT
- 9. Repeat this process as many times as needed
- 10. Files will go the location you selected in STEP# 3

